

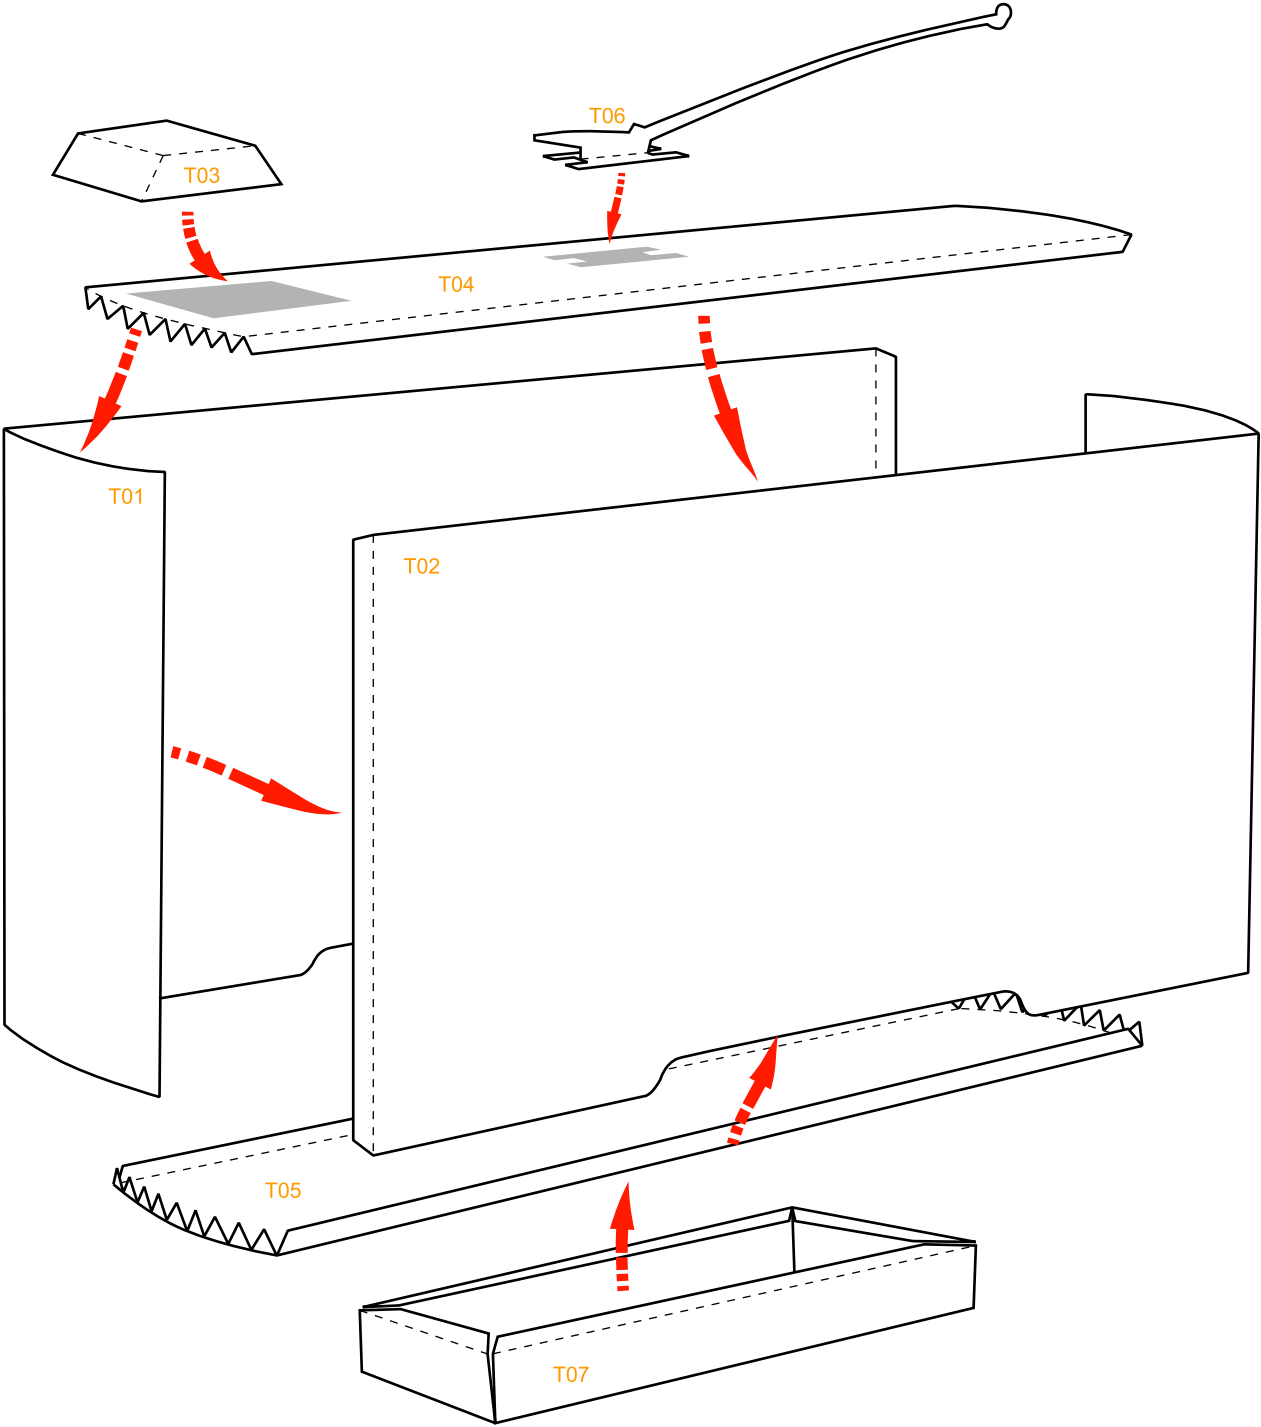


Assembly Instructions

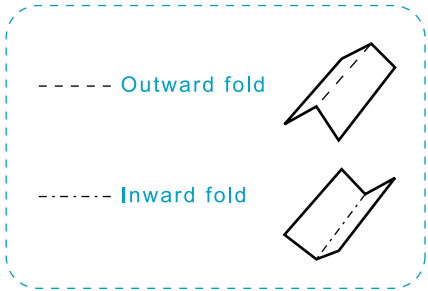

Instructions

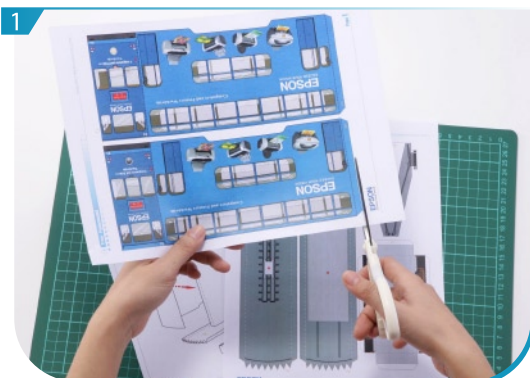

Separate all parts along the lines. Mark their identity on the back to avoid confusion.



Use a pen whose ink has dried out, or a tracer, to trace lines first.



Fold all parts along the lines.



Fold and glue T06 and make a fine cut.



Draw a straight line at the bottom of the back of T01 and T02, which is a reference line when you glue T05 to the tram body.



Glue T01 and T02 together, forming the tram body.



Glue T04 and T05 to the tram body, forming the top and bottom respectively.



Finally, assemble all the parts according to the assembly instructions. You now have a dynamic EPSON tram!